

## Channel Setting for the **ResponseCard® RF**

1. Press and release the "GO" button.
2. While the light is flashing red and green,  
Enter 2 digit channel code.  
(ie. channel 1 = 01, channel 21 = 21).
3. After the second digit is entered, the  
light should change to a solid green for  
a few seconds to indicate success.

